

KAWAI

ANYTIME X

Owner's Manual

PART NAMES
& FUNCTIONS
1

BASIC
OPERATION
2

GENERAL
OPERATION
3

APPENDIX
4

Thank you for purchasing a KAWAI AnytimeX piano!

The AnytimeX piano is a revolutionary new instrument that combines the capabilities of an acoustic piano and a digital piano. With the AnytimeX piano, one can enjoy the pleasing, expressive tone of KAWAI acoustic pianos, with the convenience of powerful, exciting features that can only be found on a digital instrument.

As its name implies, the most compelling aspect of the AnytimeX piano is that it can be played at literally any time, without disturbing family or neighbours. It will allow you to enjoy the touch of a fine KAWAI acoustic piano while retaining the privacy and power of built-in digital sound. The AnytimeX piano will offer many creative new possibilities for music-making in your home, school, or recording studio.

To get the most from your AnytimeX piano, please read this manual carefully and become familiar with all its powerful functions and features. We trust that you and your AnytimeX piano will be making beautiful music together (at any time of the day or night) for many years to come.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	4
1. PART NAMES & FUNCTIONS.....	8
◇ CONTROL BOX	8
2. BASIC OPERATION.....	10
3. GENERAL OPERATION	11
1) SELECTING SOUNDS.....	12
2) REVERB.....	14
3) DAMPER RESONANCE	15
4) TUNING.....	16
5) TRANSPOSE.....	17
6) METRONOME.....	18
7) MIDI CHANNEL.....	20
◇ MIDI OVERVIEW.....	20
8) LOCAL CONTROL.....	23
4. APPENDIX	24
◇ SPECIFICATIONS.....	24
◇ MIDI IMPLEMENTATION CHART	25
◇ MAINTENANCE PRECAUTIONS	26

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

AVIS : RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRIR.

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Examples of Picture Symbols



denotes that care should be taken.
The example instructs the user to take care not to allow fingers to be trapped.



denotes a prohibited operation.
The example instructs that disassembly of the product is prohibited.



denotes an operation that should be carried out.
The example instructs the user to remove the power cord plug from the AC outlet.

Read all the instructions before using the product.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prongs are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING - When using electric products, basic precautions should always be followed, including the following.



WARNING

Indicates a potential hazard that could result in death or serious injury if the product is handled incorrectly.

The product should be connected to an AC outlet of the specified voltage.



- If you are going to use an AC power cord, make sure that it has the correct plug shape and conforms to the specified power voltage.
- Failure to do so may result in fire.

Use only the AC adaptor included with this instrument to power the instrument.



- Do not use other AC adaptors to power this instrument.
- Do not use the included AC adaptor or AC power cord to power other equipment.

Do not insert or disconnect the power cord plug with wet hands.




Doing so may cause electric shock.

The chair must be used properly (it must be used only when playing the product).

- Do not play with it or stand on it.
- Only one person is allowed to sit on it.
- Do not sit on it when opening the lid.
- Re-tighten the bolts occasionally.

Doing so may cause the chair to fall over or your fingers to be trapped, resulting in injury.

When using the headphones, do not listen for long periods of time at high volume levels.

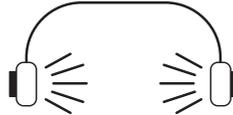

Doing so may result in hearing problems.

Do not lean against the keyboard.



Doing so may cause the product to fall over, resulting in injury.

Do not disassemble, repair or modify the product.



Doing so may result in product breakdown, electric shock or short-circuit.

When disconnecting the AC power cord's plug, always hold the plug and pull it to remove it.




- Pulling the AC power cord itself may damage the cord, causing a fire, electric shock or short-circuit.

The product is not completely disconnected from the power supply even when the power switch is turned off. If the product will not be used for a long time, unplug the AC power cord from the AC outlet.



- Failure to do so may cause fire in case of lightning.
- Failure to do so may over-heat the product, resulting in fire.

This product may be equipped with a polarised line plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.

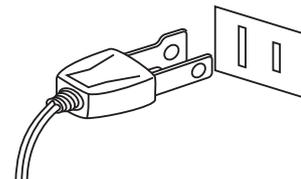

It is a good practice to place the instrument near the AC outlet and to place the power cord plug in a position that allows the plug to be disconnected easily in the event of an emergency. Electricity is always charging while the plug is in the AC outlet even when the power switch is in the 'OFF' position.



CAUTION


Indicates a potential hazard that could result in injury or damage to the product or other property if the product is handled incorrectly.

Do not use the product in the following areas.

- Areas, such as those near windows, where the product is exposed to direct sunlight
- Extremely hot areas, such as near a heater
- Extremely cold areas, such as outside
- Extremely humid areas
- Areas where a large amount of sand or dust is present
- Areas where the product is exposed to excessive vibrations

Using the product in such areas may result in product breakdown. Use the product only in moderate climates (not in tropical climates).

When closing the fallboard, close it gently.

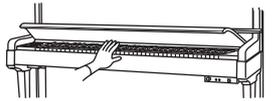


Closing it roughly may trap your fingers, resulting in injury.

Before connecting cords, make sure that the power to this product and other devices is turned OFF.



Failure to do so may cause breakdown of this product and other devices.

Take care not to allow any foreign matter to enter the product.

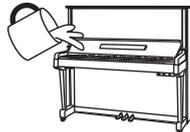


Entry of water, needles or hair pins may result in breakdown or short-circuit. The product should not be exposed to dripping or splashing. No objects filled with liquids, such as vases, should be placed on the product.

Do not drag the product on the floor. Take care not to drop the product.



Please lift up the product when moving it. Please note that the product is heavy and must be carried by more than two persons. Dropping the product may result in breakdown.

Do not place the product near electrical appliances such as TVs and radios.

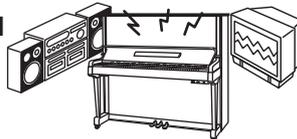

- Doing so may cause the product to generate noise.
- If the product generates noise, move the product sufficiently away from the electrical appliance or connect it to another AC outlet.

When connecting the AC power cord and other cords, take care not to entangle them.




Failure to do so may damage them, resulting in fire, electric shock or short-circuit.

Do not wipe the product with benzene or thinner.



- Doing so may result in discoloration or deformation of the product.
- When cleaning the product, put a soft cloth in lukewarm water, squeeze it well, then wipe the product.

Do not stand on the product or exert excessive force.

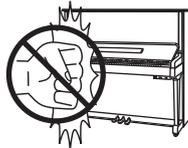

- Doing so may cause the product to become deformed or fall over, resulting in breakdown or injury.

Do not place naked flame, such as lighted candles on the product.



Doing so may cause the illumination to fall over, resulting in fire.

Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.



Failure to do so may over-heat the product, resulting in fire.

The product should be located so that its location or position does not interfere with its proper ventilation. Ensure a minimum distance of 5cm around the product for sufficient ventilation.

The product should be serviced by qualified service personnel when:

- The power supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the product.
- The product has been exposed to rain.
- The product does not appear to operate normally or exhibits a marked change in performance.
- The product has been dropped, or the enclosure damaged.

Notes on Repair

Should an abnormality occur in the product, immediately turn the power OFF, disconnect the power cord plug, and then contact the shop from which the product was purchased.

CAUTION:

To prevent electric shock, match the wide blade of the plug with the wide socket slot and insert fully.

ATTENTION:

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Instruction for AC power cord (U.K.)

Do not plug either terminal of the power cord to the ground of the AC outlet on the wall.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different electrical circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Canadian Radio Interference Regulations


This instrument complies with the limits for a class B digital apparatus, pursuant to the Radio Interference Regulations, C.R.C., c. 1374.

1. PART NAMES & FUNCTIONS


This section explains the location and functions of the control box and connectors.

◇ CONTROL BOX


● Front view of the control box:

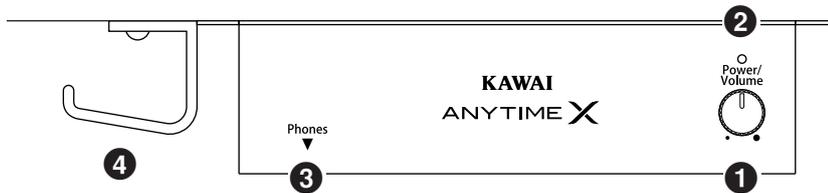


● Underside view of the control box:

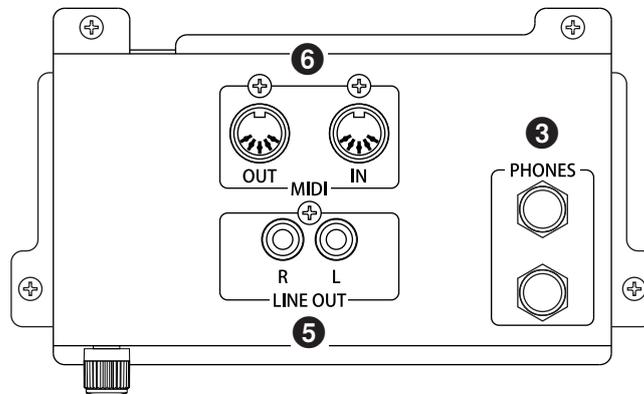

● Rear side view (DC IN connector)

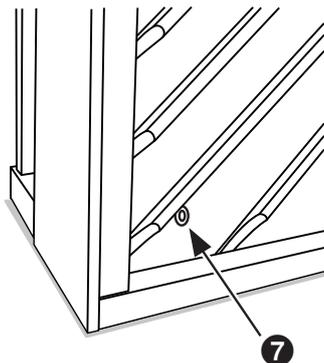

● Pedals

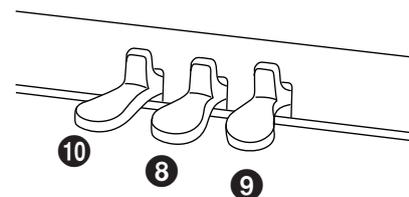

1 Power / Volume

Used to turn on/off the control box and adjust the volume when AnyTime mode is activated. Turn the knob clockwise to turn on the AnyTimeX control box and increase the volume.

2 Power Indicator

Used to indicate that the AnyTimeX control box is turned on.

3 Phones

Used to connect up to two pairs of headphones simultaneously.

4 Headphone Hook

Used to conveniently hang the headphones when not in use.

5 LINE OUT Jacks

Used to connect the AnyTime mode audio signal to an external amplifier, speakers, or recording device such as a computer.

6 MIDI IN/OUT Connectors

Used to connect the AnyTimeX piano to external MIDI devices such as other electronic instruments or computers. (See page 20)

7 DC IN Connector

Used to connect the AC adaptor.

8 Mute Pedal

Used to mute the acoustic piano sound by depressing the pedal and sliding it gently to the left, thus activating AnyTime mode.

Do not attempt to activate/deactivate AnyTime mode while playing the piano as this can cause serious damage to the action mechanism of the instrument.

9 Damper Pedal

Used to remove all dampers from the strings, allowing them to vibrate freely. This greatly enriches the piano's sound, while also assisting the pianist to play smooth 'legato' passages.

10 Soft Pedal / Sostenuto Pedal

Used to soften the sound, reducing its volume. When the 'Jazz Organ' sound is selected, the soft pedal is used to alternate the speed of the rotary speaker simulation between 'Slow' and 'Fast' effect modes.

It is also possible to use the Soft pedal as a Sostenuto pedal by depressing the pedal while turning on the AnyTimeX piano control box. In sostenuto mode, depressing the pedal after playing the keyboard and before releasing the keys sustains the sound of only the keys just played. Any keys that are pressed after the sostenuto pedal is depressed will not be sustained after the keys are released.

Furthermore, the Soft pedal is used to select different sounds, change reverb settings, and adjust various other settings of the AnyTimeX piano.

2. BASIC OPERATION

This section explains the basic procedures for turning the power on, activating AnyTime mode, and performing with headphones.


Step 1

Plug the AC adaptor into the DC IN connector located at the rear of the instrument.



Step 2

Plug the AC adaptor's power plug into the electric wall outlet.

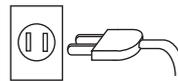

Step 3


Turn the Power/Volume knob clockwise, to the half-way position.

The LED above the Power/Volume knob will light up to indicate that the AnyTimeX control box is turned on.



Step 4

Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

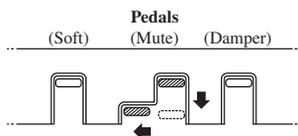


Do not attempt to activate/deactivate AnyTime mode while playing the piano, as this can cause serious damage to the action mechanism of the instrument.


Step 5

Connect a pair of headphones to one of the Phones jacks located on the underside of the control box.

Two pairs of headphones can be connected simultaneously, allowing two people to listen to the AnyTimeX piano at the same time.

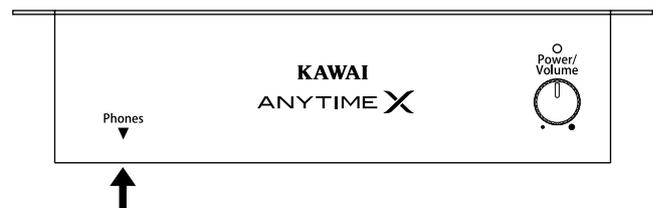

Play the piano.

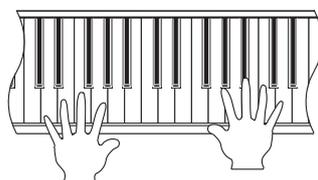


The sound of a Concert Grand piano will be played through the headphones, with the acoustic piano sound muted.

3. GENERAL OPERATION

This section explains how to combine keyboard and pedal presses to select different sounds, change reverb settings, and adjust various other settings of the AnyTimeX piano.

- | | |
|---------------------|------------------|
| 1) Selecting Sounds | 5) Transpose |
| 2) Reverb Type | 6) Metronome |
| 3) Damper Resonance | 7) MIDI Channel |
| 4) Tuning | 8) Local Control |

◆ The following illustrations display the keys assigned to adjusting various settings of the AnyTimeX piano.

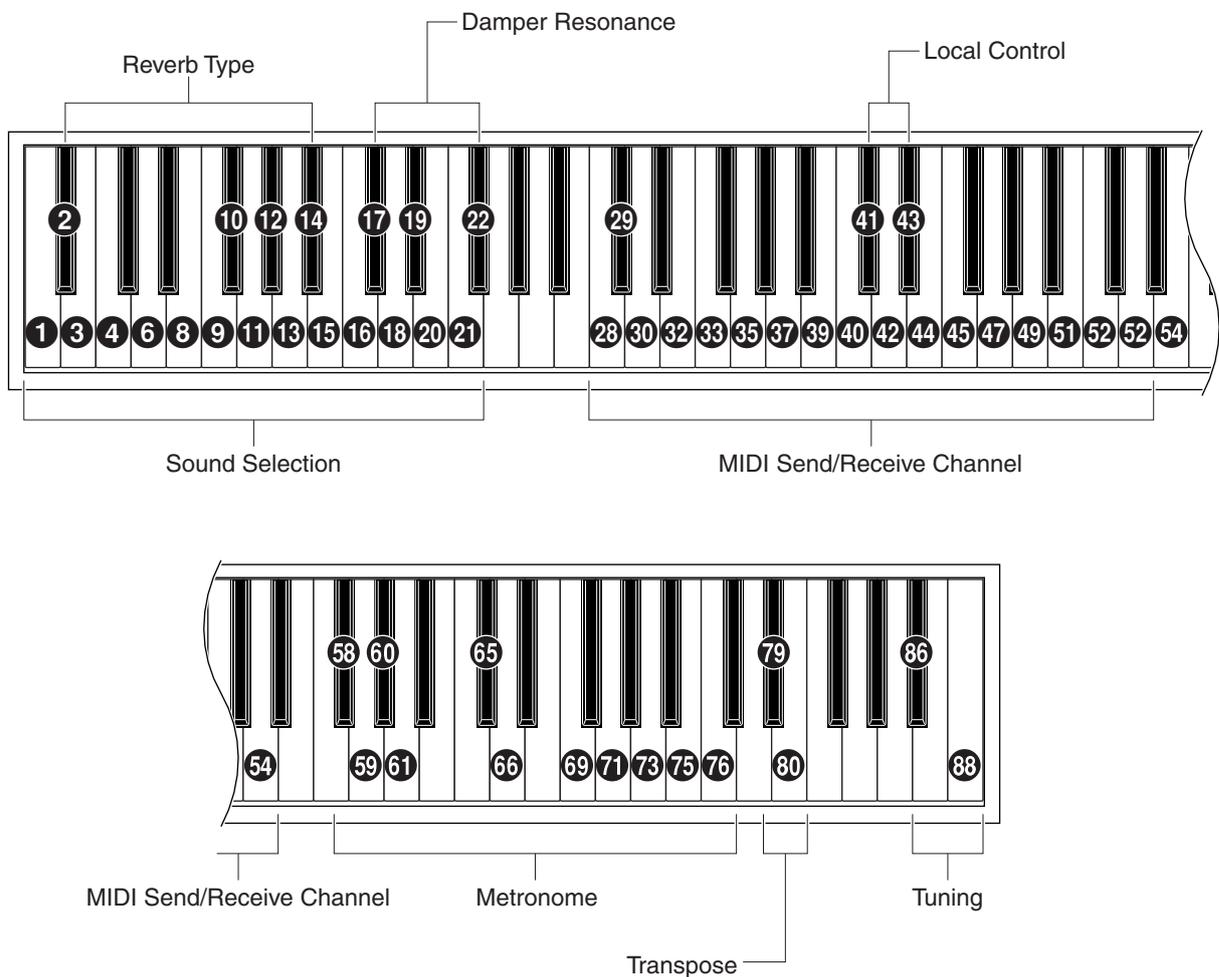

◆ Pressing one of the keys numbered in the above illustrations while 'Setting Mode' is activated will allow various settings of the AnyTimeX piano to be adjusted. During 'Setting Mode', no sound will be produced when pressing one of the numbered keys, with the exception of the keys used for adjusting the Metronome, which will produce a metronome sound when pressed.

◆ Pressing keys which are not numbered in the above illustrations, such as keys No. 23-27, will produce the currently selected sound. These keys allow changes to the sound to be heard as they are made.

1) SELECTING SOUNDS


The AnyTimeX piano features 13 realistic tones/sounds suitable for various musical styles.

□ Preparation

1. Turn on the AnyTimeX piano using the Power/Volume knob located on the right of the control box.
2. Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

□ Step 1

Activating Setting Mode:

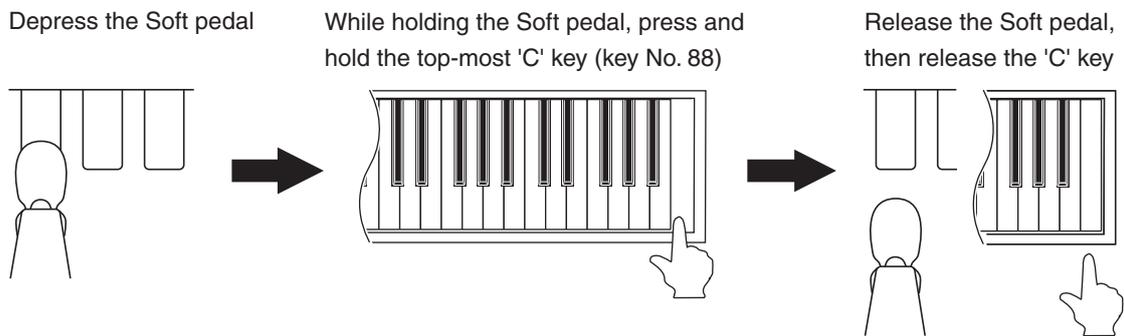


The above combination of holding the Soft pedal while pressing the top-most 'C' key will activate Setting Mode.

- ◆ If the Damper pedal is held while performing the above combination, Setting Mode will not be activated.
- ◆ If another key is pressed while depressing the Soft pedal, Setting Mode will not be activated.

□ **Step 2**
Selecting Sounds:

Press one of the bottom-most white keys (keys No. 1-21) to select the desired sound. Please refer to the table below for a list of available sounds and the respective key assignments.

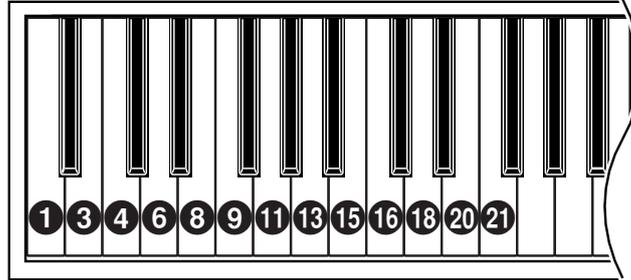

Key No.	Sound Name	Description
1	Concert Grand	The sound of a KAWAI concert grand piano.
3	Concert Grand 2	
4	Mellow Grand	The sound of a softly strung grand piano.
6	Mellow Grand 2	
8	Modern Piano	The sound of a modern grand piano.
9	Classic E.Piano	The sound of a classic electric piano.
11	Modern E.P.	The sound of a modern electric piano.
13	Slow Strings	The sound of an ensemble of strings.
15	Choir	The sound of an ensemble of singers.
16	Harpsichord	The sound of a Baroque period plucked string instrument.
18	Vibraphone	The sound of a percussive, tuned instrument played using mallets.
20	Church Organ	The sound a pipe organ, suitable for Church music etc.
21	Jazz Organ	The sound of an electronic jazz organ. NOTE: When the 'Jazz Organ' sound is selected, the soft pedal is used to alter the speed of the Drawbar Organ rotary speaker simulation between 'Slow' and 'Fast' effect modes.

□ **Step 3**
Deactivating Setting Mode:

After selecting the desired sound, depress the Damper pedal to deactivate Setting Mode.

- ◆ The Concert Grand sound will be selected automatically when the power is turned on.

2) REVERB


Reverb adds reverberation to the sound, simulating the acoustic environment of a recital room, stage, or concert hall.

□ Preparation

1. Turn on the AnyTimeX piano using the Power/Volume knob located on the right of the control box.
2. Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

□ Step 1

Activating Setting Mode:

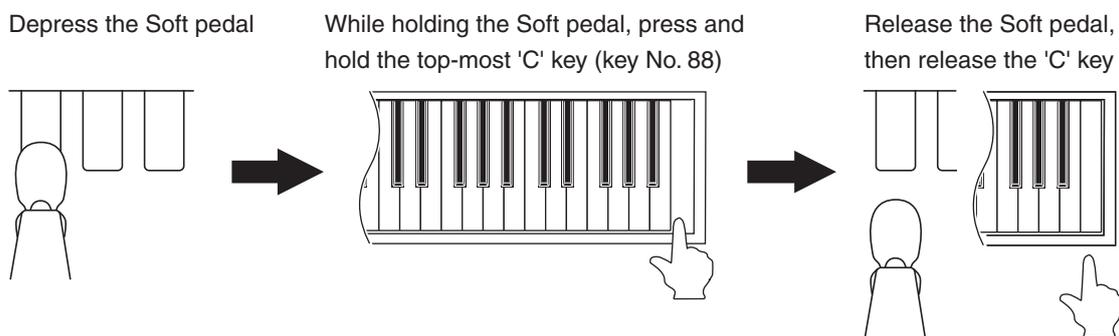


The above combination of holding the Soft pedal while pressing the top-most 'C' key will activate Setting Mode.

□ Step 2

Selecting Reverb Type:

Press black keys No. 2, 10, 12, or 14 to select the desired reverb type. Please refer to the table below for a list of reverb types and the respective key assignments.

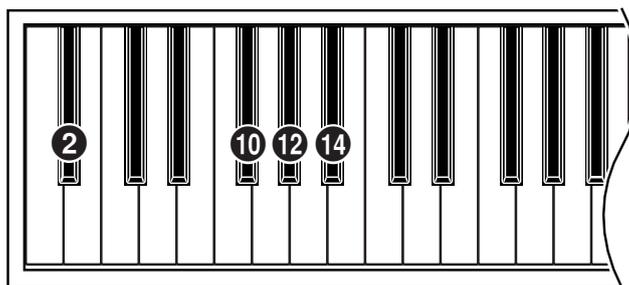

Key No.	Reverb Type	Description
2	Reverb Off	Deactivate the reverberation effect.
10	Room	Simulates the sound of a small room, adding a soft reverberation.
12	Stage	Simulates the sound of playing on a live stage.
14	Hall	Simulates the deep reverberation of a large concert hall.

□ Step 3

Deactivating Setting Mode:

After selecting the desired reverb type, depress the Damper pedal to deactivate Setting Mode.

- ◆ The reverb type will be set to 'Room' automatically when the power is turned on.

3) DAMPER RESONANCE


When the damper pedal is depressed on an acoustic piano, all dampers are lifted up, allowing the strings to vibrate freely. When a note or chord is played on the piano with the damper pedal depressed, not only will the strings of the notes played vibrate, but also the strings of other notes, vibrating in sympathetic resonance. The Damper Resonance function of the AnyTimeX piano attempts to simulate this phenomenon.

□ Preparation

1. Turn on the AnyTimeX piano using the Power/Volume knob located on the right of the control box.
2. Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

□ Step 1

Activating Setting Mode:

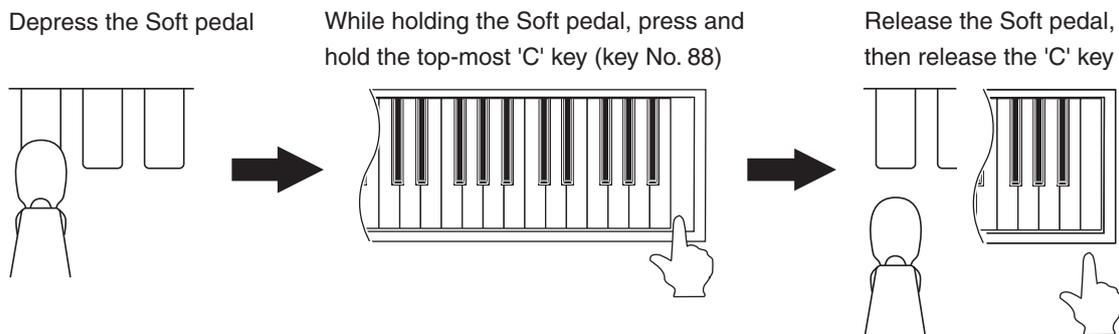


The above combination of holding the Soft pedal while pressing the top-most 'C' key will activate Setting Mode.

□ Step 2

Selecting Damper Resonance Level:

Press black keys No. 17, 19, or 22 to select the desired damper resonance level. Please refer to the table below for a list of damper resonance levels and the respective key assignments.

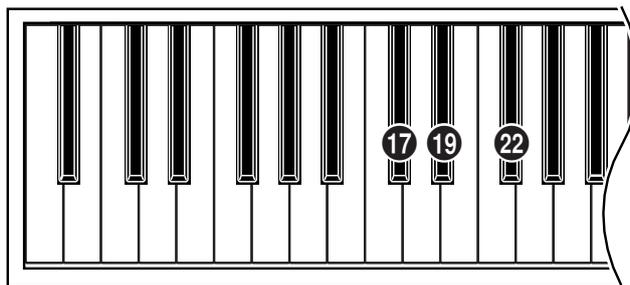

Key No.	Damper Resonance Level
17	Off
19	Medium
22	Strong

□ Step 3

Deactivating Setting Mode:

After selecting the desired damper resonance level, depress the Damper pedal to deactivate Setting Mode.

- ◆ The Damper Resonance function will only be applied to the Concert Grand, Concert Grand 2, Mellow Grand, and Mellow Grand 2 piano sounds.
- ◆ The damper resonance level will be set to 'Medium' automatically when the power is turned on.

4) TUNING


This function allows the pitch of the AnyTimeX piano to be finely adjusted, and may prove useful when playing with other instruments.

□ Preparation

1. Turn on the AnyTimeX piano using the Power/Volume knob located on the right of the control box.
2. Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

□ Step 1

Activating Setting Mode:

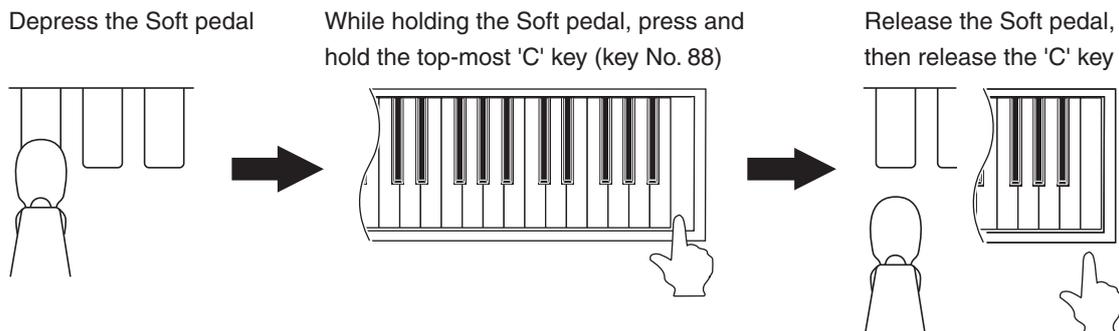


The above combination of holding the Soft pedal while pressing the top-most 'C' key will activate Setting Mode.

□ Step 2

Adjusting Tuning Value:

Press the top-most 'C' key (key No. 88) repeatedly to increase the tuning pitch, or the top-most black key (key No. 86) repeatedly to decrease the tuning pitch.

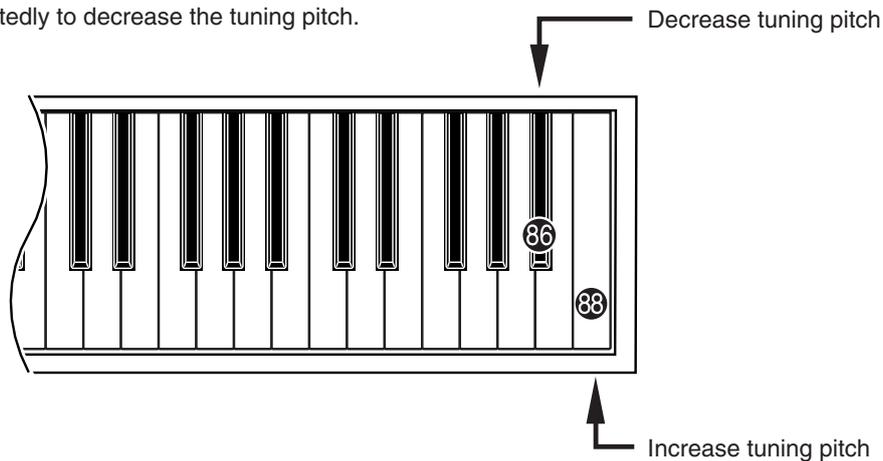

- ◆ The tuning value can be adjusted within the range of 427.0 to 453.0 Hz, altering by 0.5 Hz increments each time key No. 88 or 86 is pressed.
- ◆ Press keys No. 86 and 88 simultaneously to restore the tuning setting to the default value of 440 Hz.

□ Step 3

Deactivating Setting Mode:

After adjusting the desired tuning value, depress the Damper pedal to deactivate Setting Mode.

- ◆ The tuning value will be stored and recalled automatically when the power is turned on. Care must therefore be taken when adjusting this setting.

5) TRANSPOSE


The transpose function allows the key of the AnyTimeX piano to be raised or lowered in half steps. This is particularly useful when accompanying instruments with different tones, or when a song learned in one key must be played in another key.

□ Preparation

1. Turn on the AnyTimeX piano using the Power/Volume knob located on the right of the control box.
2. Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

□ Step 1

Activating Setting Mode:

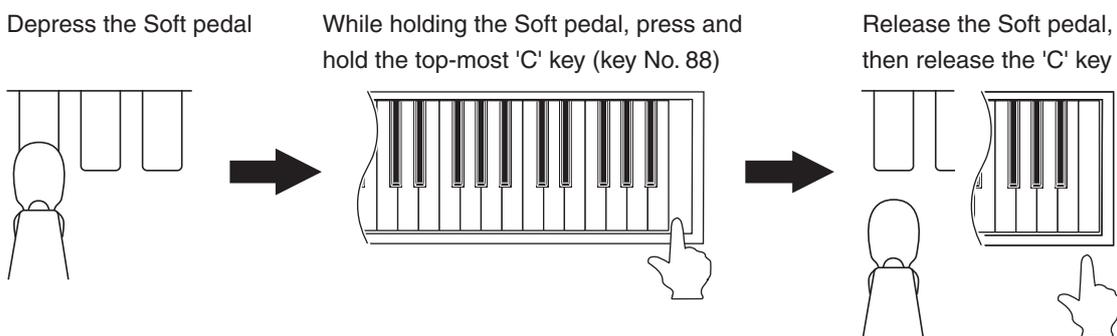


The above combination of holding the Soft pedal while pressing the top-most 'C' key will activate Setting Mode.

□ Step 2

Adjusting Transpose Value:

Press key No. 80 repeatedly to increase the transposition value, or key No. 79 repeatedly to decrease the transposition value.

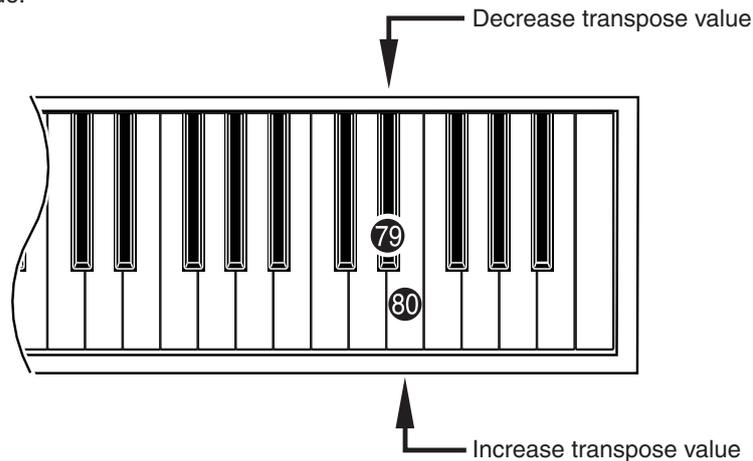

- ◆ The transpose value can be adjusted within the range of 12 halftones higher or 12 halftones lower.
- ◆ Press keys No. 79 and 80 simultaneously to restore the transpose setting to the default value of '0'.

□ Step 3

Deactivating Setting Mode:

After adjusting the desired transpose value, depress the Damper pedal to deactivate Setting Mode.

- ◆ The transpose value will be set to '0' automatically when the power is turned on.

6) METRONOME


Rhythm is one of the most important elements when learning music. It is important to practice playing the piano at the correct tempo and with a steady rhythm. The metronome function helps learners to achieve this by providing a steady beat to perform to.

□ **Preparation**

1. Turn on the AnyTimeX piano using the Power/Volume knob located on the right of the control box.
2. Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

□ **Step 1**

Activating Setting Mode:

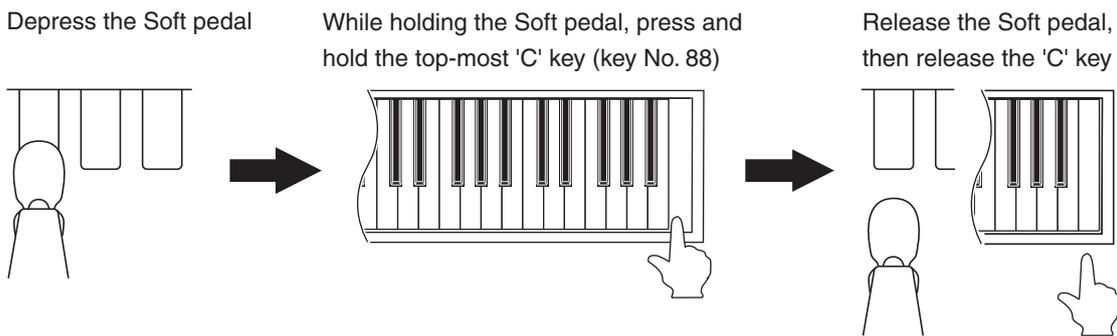


The above combination of holding the Soft pedal while pressing the top-most 'C' key will activate Setting Mode.

□ **Step 2**

Adjusting Metronome Time Signature, Tempo, and Volume:

- ◆ Press keys No. 71, 73, 75, or 76 to start the metronome and/or set the metronome time signature.
- ◆ Press keys No. 58, 59, 60, or 61 to adjust the metronome tempo.
- ◆ Press white key No. 66 or black key No. 65 to adjust the metronome volume.

Please refer to the table below for a list of metronome functions and the respective key assignments.

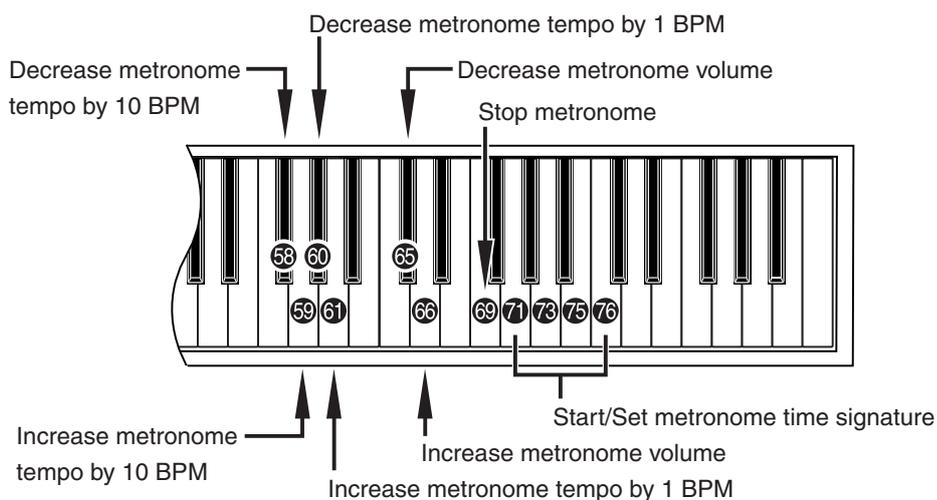

Key No.	Metronome Function
58	Decrease metronome tempo by 10 BPM
59	Increase metronome tempo by 10 BPM
60	Decrease metronome tempo by 1 BPM
61	Increase metronome tempo by 1 BPM
65	Decrease metronome volume
66	Increase metronome volume

Key No.	Metronome Function
69	Stop metronome
71	Start/Set metronome to 1/4 time signature
73	Start/Set metronome to 2/4 time signature
75	Start/Set metronome to 3/4 time signature
76	Start/Set metronome to 4/4 time signature

- ◆ The metronome tempo can be adjusted within the range of 10-400 BPM.
Press keys No. 58 and 59, or 60 and 61 simultaneously to restore the metronome tempo to the default value of 120 BPM.
- ◆ The metronome volume can be adjusted within the range of 1-10.
Press keys No. 65 and 66 simultaneously to restore the metronome volume to the default value of '5'.
- ◆ Press white key No. 69 to stop the metronome.

Step 3

Deactivating Setting Mode:

After adjusting the desired metronome settings, depress the Damper pedal to deactivate Setting Mode.

7) MIDI CHANNEL

◇ MIDI OVERVIEW

The term MIDI is an acronym for Musical Instrument Digital Interface, an international standard for connecting synthesizers, sequencers (MIDI recorders) and other electronic instruments in order to exchange performance data.

The AnyTimeX piano is equipped with two MIDI jacks for exchanging data: MIDI IN and MIDI OUT. Each uses a special cable with a DIN connector.


MIDI IN : For receiving note, program change and other data.

MIDI OUT : For sending note, program change and other data.

MIDI uses channels to exchange data back and forth between MIDI devices. There are receive (MIDI IN) and transmit (MIDI OUT) channels. Most musical instruments or devices with MIDI functions are equipped with both MIDI IN and MIDI OUT jacks and are capable of transmitting and receiving data via MIDI.

The receive channels are used to receive data from another MIDI device and the transmit channels are used to transmit data to another MIDI device.

MIDI connection example:

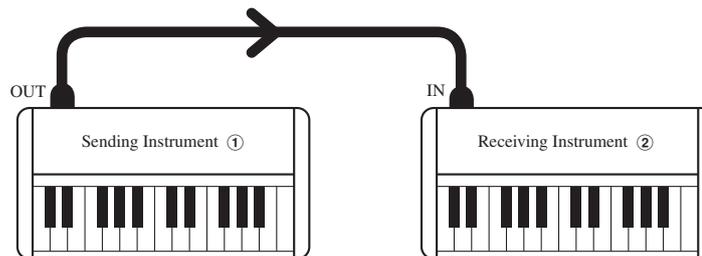


When connected as shown in the illustration above, MIDI data sent from ① will be also played on ② if both channels match.

MIDI instruments have 16 channels for sending and receiving MIDI data.

◆ MIDI Examples

◆ Connection to a sequencer:

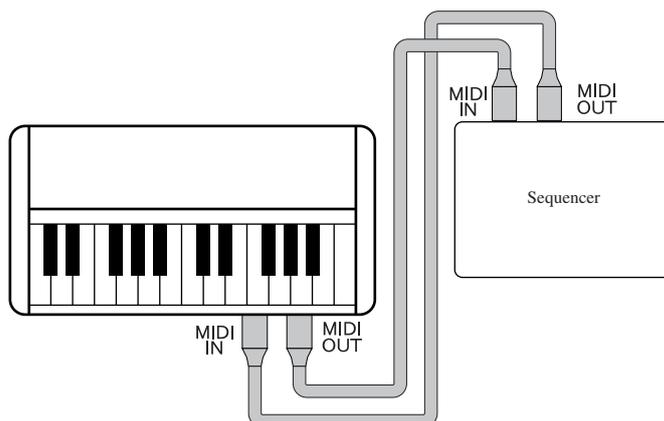

When connected as shown in this illustration, songs played on the AnyTimeX piano can be recorded with a sequencer, and then played back at any time.

◆ AnyTimeX MIDI Functions

The AnyTimeX piano is capable of the following MIDI functions:

- ◆ Sending/Receiving keyboard note information (i.e. which keys are pressed).
- ◆ Sending/Receiving pedal information (i.e. ON/OFF data for the damper, soft and sostenuto pedals).
- ◆ Receiving volume data (i.e. adjusting the volume of the AnyTimeX piano using a separate MIDI instrument).
- ◆ Sending/Receiving exclusive data.

Please refer to the complete listing on page 25 - MIDI Implementation Chart - for more information regarding MIDI functionality.

■ MIDI Program Change numbers

Sound Name	Program Number
Concert Grand	1
Concert Grand 2	2
Mellow Grand	3
Mellow Grand 2	4
Modern Piano	5
Classic E.Piano	6
Modern E.P.	7
Slow Strings	8
Choir	9
Harpsichord	10
Vibraphone	11
Church Organ	12
Jazz Organ	13

The MIDI Channel function is used to determine on which MIDI channel the AnyTimeX piano will exchange MIDI information with external MIDI devices and instruments.


The selected channel will function as both the Transmit and Receive channel.

□ Preparation

1. Turn on the AnyTimeX piano using the Power/Volume knob located on the right of the control box.
2. Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

□ Step 1

Activating Setting Mode:

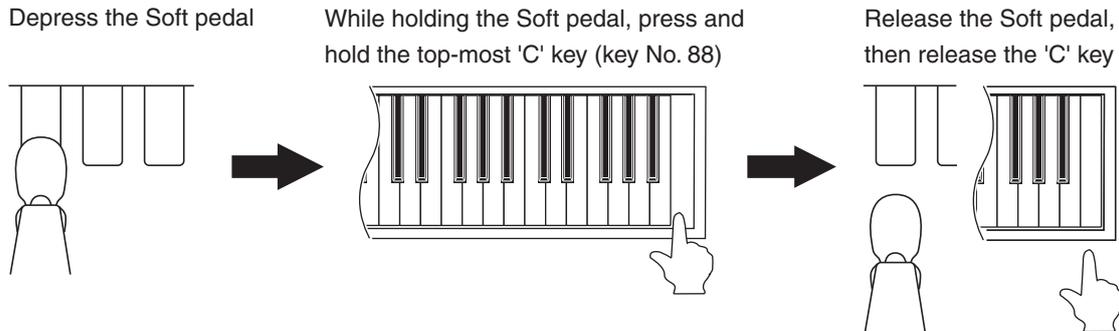


The above combination of holding the Soft pedal while pressing the top-most 'C' key will activate Setting Mode.

□ Step 2

Adjusting MIDI Channel:

Press white keys No. 28-54 to adjust the MIDI channel.

Please refer to the table below for a list of MIDI channels and the respective key assignments.

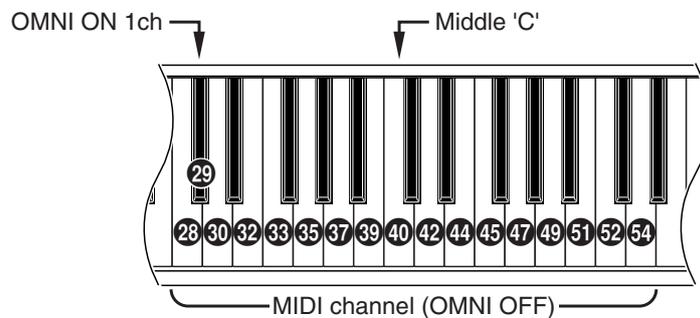

Key No.	28	30	32	33	35	37	39	40	42	44	45	47	49	51	52	54
MIDI Channel	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

- ◆ The MIDI channel can be adjusted within the range of 1-16.
- ◆ Press black key No. 29 to allow MIDI information to be received from all channels. This is often referred to as 'OMNI ON'. If, a specific MIDI channel is selected, the AnyTimeX piano will be set to 'OMNI OFF' and data will only be received on that specified channel.

□ Step 3

Deactivating Setting Mode:

After adjusting the desired MIDI channel settings, depress the Damper pedal to deactivate Setting Mode.

- ◆ The MIDI channel setting will be set to 'OMNI ON 1ch' automatically when the power is turned on.

8) LOCAL CONTROL

This function determines whether the AnyTimeX piano will play a sound when the keyboard is played.


With Local Control set to 'On', the AnyTimeX piano will play a sound when the keyboard is played. However, even with Local Control set to 'Off', the AnyTimeX piano keyboard will continue to transmit data on the selected MIDI channel to an external MIDI device or personal computer.

□ Preparation

1. Turn on the AnyTimeX piano using the Power/Volume knob located on the right of the control box.
2. Depress the Mute pedal, then slide it gently to the left to mute the acoustic piano sound and activate AnyTime mode.

□ Step 1

Activating Setting Mode:

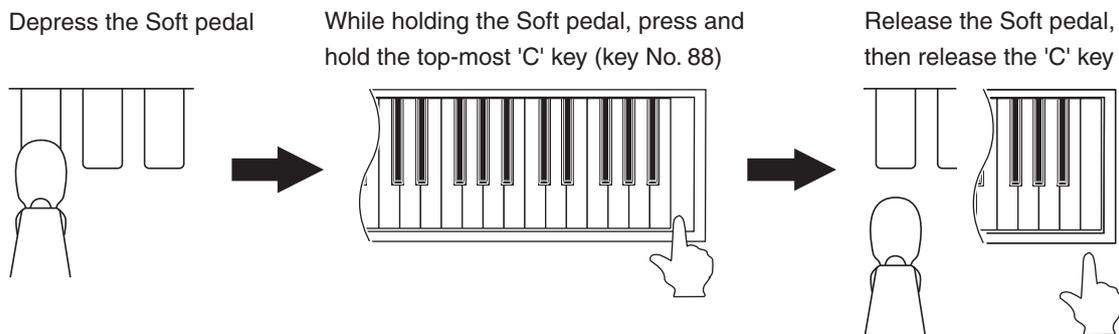


The above combination of holding the Soft pedal while pressing the top-most 'C' key will activate Setting Mode.

□ Step 2

Adjusting Local Control:

Press black keys No. 41 or 43 to adjust the local control setting.

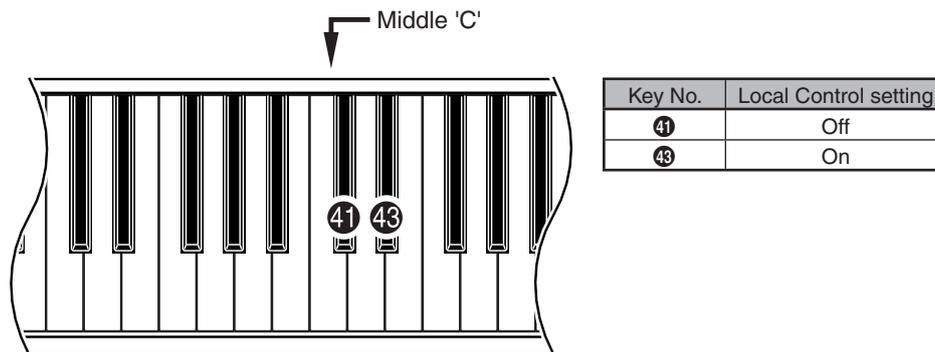

□ Step 3

Deactivating Setting Mode:

After adjusting the desired local control settings, depress the Damper pedal to deactivate Setting Mode.

- ◆ The local control setting will be set to 'On' automatically when the power is turned on.

4. APPENDIX

◇ SPECIFICATIONS

■ Polyphony	Maximum 96 notes
■ Sounds	Concert Grand, Concert Grand 2, Mellow Grand, Mellow Grand 2, Modern Piano, Classic E.Piano, Modern E.P., Slow Strings, Choir, Harpsichord, Vibraphone, Church Organ, Jazz Organ
■ Reverb	Room, Stage, Hall
■ Metronome	Time signatures: 1/4, 2/4, 3/4, 4/4 Tempo: 10-400 BPM
■ Transpose	From -12 to +12 halftones
■ Other Functions	Damper Resonance (Medium, Strong), Tuning
■ Pedals	Damper (8 levels), Soft (switchable to Sostenuto)
■ Jacks	Headphones x2, MIDI (IN, OUT), LINE OUT (L, R), DC IN
■ Power	DC 15V (using included AC adaptor)
■ Power Consumption	15W (using included AC adaptor)
■ Accessories	Headphones, AC adaptor (PS-153), Owner's Manual

KAWAI [ANYTIME]
Model ANYTIME X ATX-p MIDI Implementation Chart

Date : OCT 2007
Version : 1.0

Function...		Transmitted	Recognised	Remarks
Basic Channel	Default Changed	1 1 - 16	1 1 - 16	
Mode	Default Messages Altered	Mode 3 × *****	Mode 1 Mode 1, 3** ×	** Set to OMNI ON in the initial setting. Set to OMNI OFF by MIDI channel.
Note Number	: True voice	21 - 108* *****	0 - 127 0 - 127	* 9 - 120 including transpose
Velocity	Note ON Note OFF	○ 9nH v=1-127 × 9nH v=0	○ ×	
After Touch	Key's Ch's	× ×	× ×	
Pitch Bend		×	×	
Control Change		7 × 64 ○ (right pedal) 66 ○ (left pedal)*** 67 ○ (left pedal)	○ ○ ○ ○	Volume Damper Pedal ***Sostenuto Pedal ¹ Soft Pedal ¹
Prog Change	: True #	○ (0 - 12) *****	○ 0 - 12	
System Exclusive		○	○	
Common	: Song Pos. : Song Sel. : Tune	× × ×	× × ×	
System Real time	: Clock : Commands	× ×	× ×	
Aux Messages	: Local ON/OFF : All Notes OFF : Active Sense : Reset	× × ○ ×	○ ○ (123 - 127) ○ ×	
¹ Notes : Control Change #66 will function only when the Soft/Sostenuto pedal is set to 'Sostenuto Pedal' mode (see page 9). Control Change #67 will function only when the Soft/Sostenuto pedal is set to 'Soft Pedal' mode (default).				

Mode 1: OMNI ON, POLY
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO
Mode 4: OMNI OFF, MONO

○: Yes
×: No


◇ MAINTENANCE PRECAUTIONS

Please read the following information before attempting maintenance/servicing of the AnyTimeX piano.

Lowering the Sensor Rail


□ Step 1

Remove the four screws from the points shown below, then raise the hammer rail.

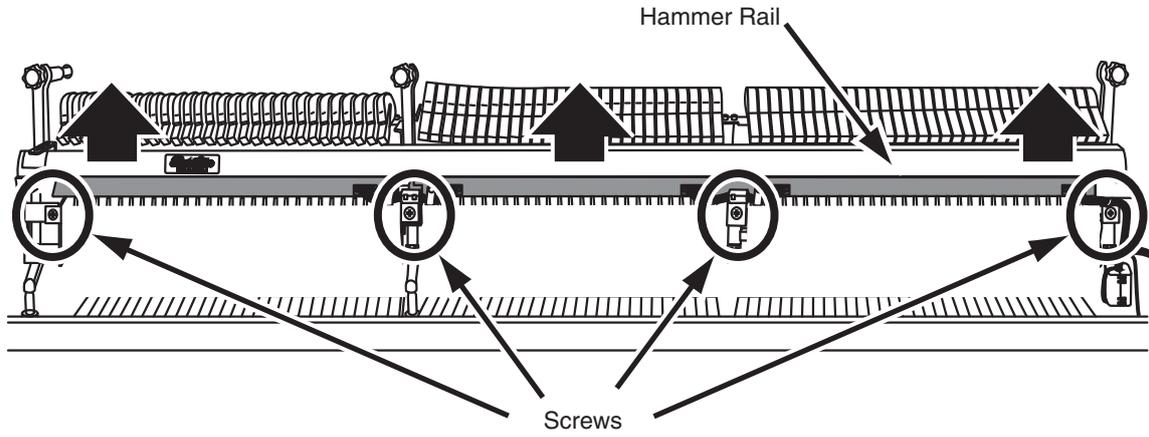


□ Step 2

While holding the hammer rail, lower the sensor rail forward gently.

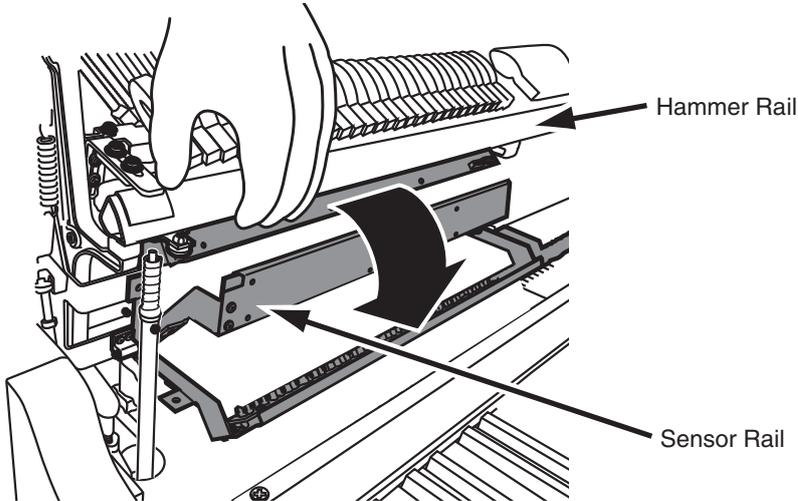


■ Caution

When removing the action, be sure to disconnect both the sensor connector and the earth/ground wire.

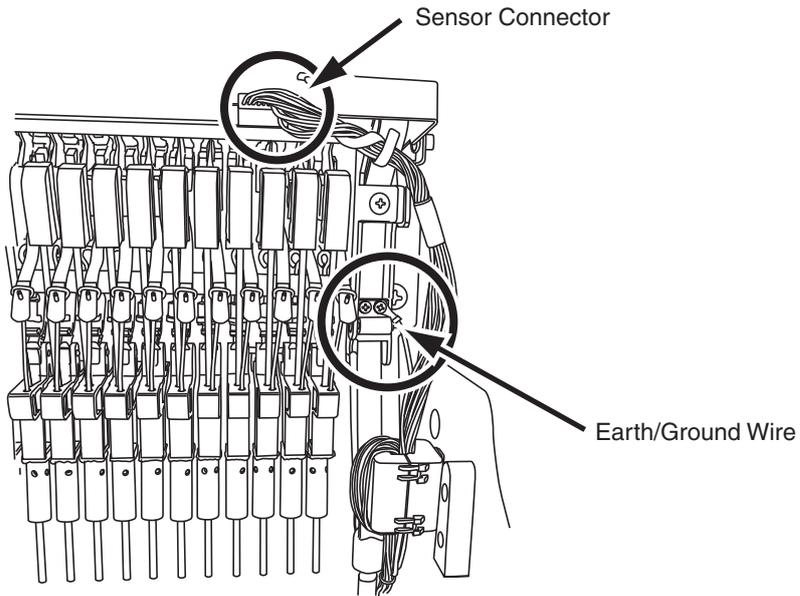**■ Caution**

When removing the muting wire from the action, first loosen the two adjustment screws on the Hammer Rail Stopper Arm.

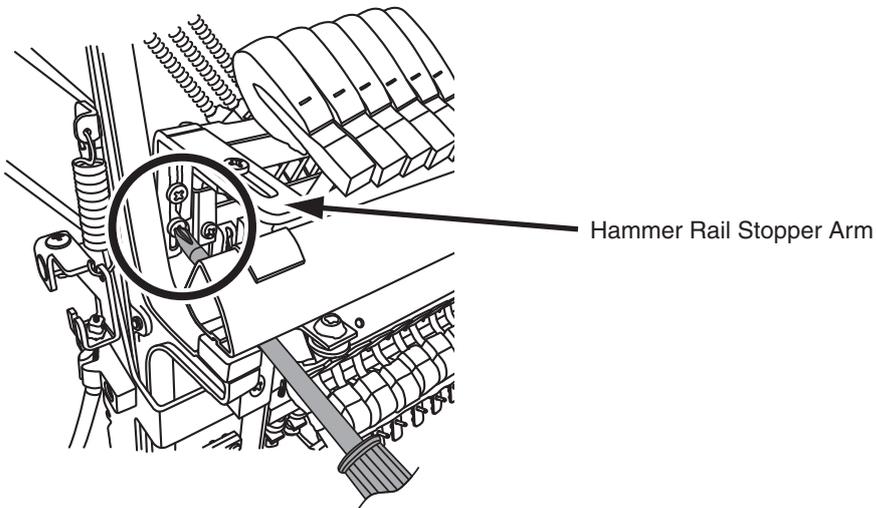

KAWAI

THE FUTURE OF THE PIANO

AnyTimeX Owner's Manual (ATX-p)
H-5678 : 859559
OW016E-S0712
Version.1

Printed in Indonesia

Copyright © 2007 KAWAI Musical Instruments Mfg. Co.,Ltd. All Rights Reserved.